


NOTE THE CORRECT ORIENTATION OF EACH BRACKET. THE TWO-PRONGED END OF THE BRACKET SHOULD ALWAYS BE FACING UP.

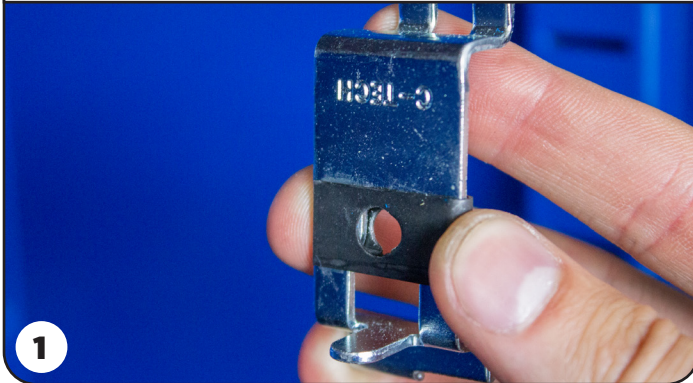

SELECT YOUR SHELF HEIGHT AND INSERT BRACKETS INTO SLOTS CUT INTO THE SIDE OF THE CABINET COMPARTMENT.



INSERT TWO-PRONGED END INTO SHELF SLOT FIRST.



ROTATE BRACKET DOWN SO THAT BOTTOM PRONG RESTS INSIDE THE SLOT IMMEDIATELY BELOW.



REPEAT UNTIL ALL FOUR BRACKETS ARE IN PLACE. VERIFY THAT THEY ARE ALL INSTALLED AT THE SAME HEIGHT.



REST SHELF ON BRACKETS.



ENSURE THAT THE BLACK THREAD CLAMPS ON EACH BRACKET ARE LINED UP WITH THE SLOTS IN THE SHELF.



USING A T30 BIT, SECURE THE SHELF TO EACH BRACKET AFTER ALIGNING FRONT-TO-BACK.

